


Mounting instruction

AIRCELL® 7

UHF- Connector prof. / Art. Nr.: 7394




1

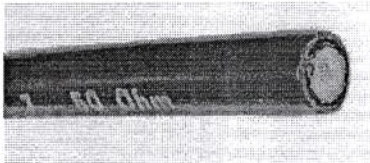


Cut off cable tail right-angled.

2

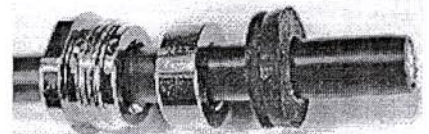

Move the nut, clamping ring and rubber washer over the cable tail. Hint: With a bit of Vaseline the rubber washer can be moved easily over the cable sheath.

3




Remove 20 mm of the outer sheath with a knife.

4




Bend copper braid upwards right-angled. Insert contact sleeve between copper foil and braid until stop. Cut off protruding braid. Move the rubber seal to the front, up to the contact sleeve.

5

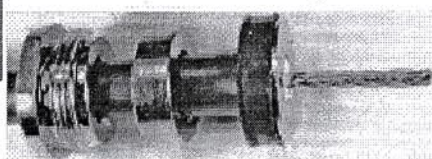


Remove the copper foil and the dielectric with a knife.

6

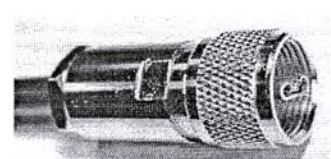

The prepared cable tail has to be carefully inserted into the housing until stop. Tighten the clamping nut finger tight with two open-ended spanners 16 mm.

7

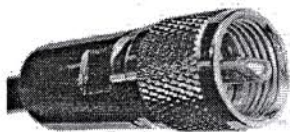

Carefully solder the inner conductor at the tip.